


## Multi-sockets Square Li-ion Battery

PB-S series camera batteries are compact designed, shorter than normal V/Gold mount batteries, and match perfectly with most of the Cine-cameras. The build-in LCD can display accurate power info during charging and discharging, and support viewfinder info display on both SONY and RED cameras. To make convenient connections, the PB-S batteries provide USB output socket and up to 4 D-tap sockets for camera-top devices.

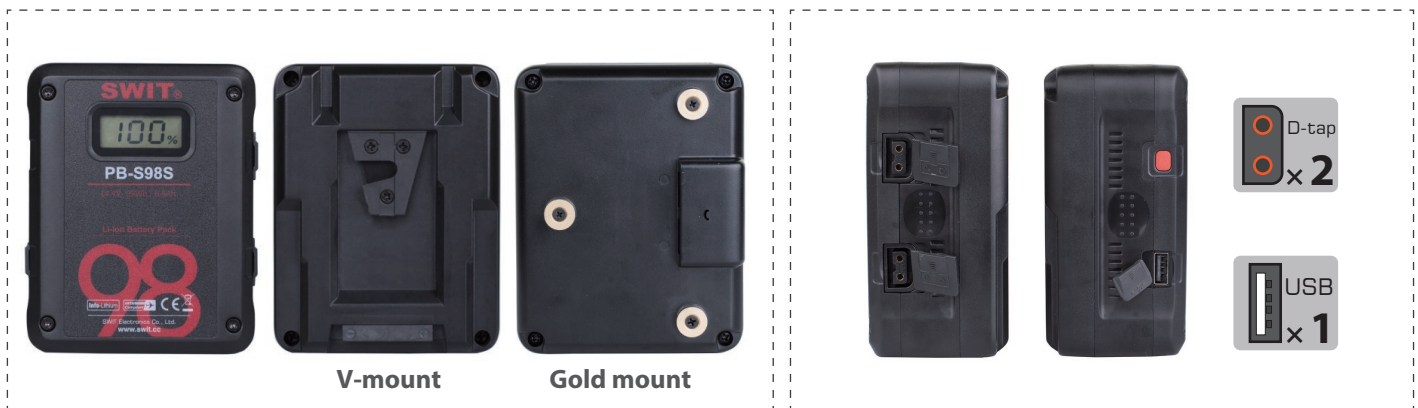

### PB-S98A/S 98Wh

- ◆ Square shape design for Cine-cameras
- ◆ Max 100W, 8A high load
- ◆ 2x D-tap output sockets
- ◆ 1x USB 5V/2A power output sockets
- ◆ LCD display accurate remaining run time
- ◆ Display power info in both SONY & RED
- ◆ Multiple circuit protections

**PB-S98A: Gold mount**

**PB-S98S: V-mount**

Model	PB-S98S	PB-S98A
Battery plate	V-mount	Gold-mount
Nominal voltage	14.4V	14.4V
Capacity	98Wh,6.8Ah	98Wh,6.8Ah
Max output	Electrodes	100W,8A
	D-TAP	100W,8A
	USB	10W,5V/2A
	In total	100W
Dimension	121×95×59mm	121×95×62mm
Net weight	0.809kg	0.800kg
Max charging current	3A	3A
D-TAP socket number	2	2
USB socket number	1	1



**Power info display** – The LCD displays remaining power percentage, remaining working time, low power warning, and battery cycle times.



Display power percentage when the battery is free or during charging.



Display remaining running time when the battery is powering on camera or any devices. Press power check button can switch to power percentage display.



When remaining running time is less than 15 minutes, the LCD will flash to remind changing battery.



Long press power check button for 5 seconds, it will display battery cycle times.



Display warning info when the battery detected over discharging, over charging current / voltage, over load, short circuit, etc. Refer the warning code to User Manual to take steps.